



MXT TOOL PARTS LIST

DWG #	DESCRIPTION	HY-1MXT	HY-3MXT	HY-5MXT
1	Housing Assembly	MXT-01-01	MXT-03-01	MXT-05-01
3	Reaction Arm Assembly	MXT-01-03	MXT-03-03	MXT-05-03
4	Drive Plate Universal	XLT-01-04	XLT-03-04	XLT-05-04
5	Square Drive Spline	XLT-01-05-1	XLT-03-05-1	XLT-05-05-1
6	Ratchet Spline	XLT-01-06-1	XLT-03-06-1	XLT-05-06-1
7	Drive Bushing	XLT-01-07-1	XLT-03-07-1	XLT-05-07-1
8	Drive Sleeve Spline	XLT-01-08-1	XLT-03-08-1	XLT-05-08-1
10	Reaction Pawl	XLT-01-10	XLT-03-10	XLT-05-10
11	Drive Retainer Assembly	XLT-01-11	XLT-03-11	XLT-05-11
13	Drive Plate Roll Pin	XLT-01-13	XLT-03-13	XLT-05-13
15	Left & Right Button Assembly	MXT-01-15	MXT-03-15	MXT-05-15
15L	Button Lever Assembly	MXT-01-15L	MXT-03-15L	MXT-05-15L
15R	Button Lever Assembly	MXT-01-15R	MXT-03-15R	MXT-05-15R
18	Reaction Pawl Spring	MXT-01-18	MXT-03-18	MXT-05-18
19	Rod End Pin	XLT-01-19	XLT-03-19	XLT-05-19
26	End Cap	MXT-01-26	MXT-03-26	MXT-05-26
27	Drive Pawl Spring	XLT-01-27	XLT-03-27	XLT-05-27
28	Reaction Arm Lever	MXT-01-28	MXT-03-28	MXT-05-28
30	Drive Sleeve Retainer Ring	XLT-01-30	XLT-03-30	XLT-05-30
31	Shroud	MXT-01-31	MXT-03-31	MXT-05-31
32	Shroud Screw	XLT-01-32	XLT-03-32	XLT-05-32
33	Drive Pawl Spring Secondary	XLT-01-33	XLT-03-33	XLT-05-33
34	Reaction Arm Thrust Plate	MXT-01-367	MXT-03-367	MXT-05-367
37	Thrust Plate Screws	MXT-01-503	MXT-03-503	MXT-05-503
38	Reaction Arm Lever Spring	MXT-01-508	MXT-03-508	MXT-05-508
40	Roll Pin Drive Pawl Primary	XLT-01-40	XLT-03-40	XLT-05-40
41	Roll Pin Drive Pawl Secondary	XLT-01-41	XLT-03-41	XLT-05-41
42	Roll Pin Reaction Pawl	XLT-01-42	XLT-03-42	XLT-05-42
43	Reaction Arm Boot	XLT-01-43	XLT-03-43	XLT-05-43
44	Boot Screws	XLT-01-44	XLT-03-44	XLT-05-44
45	Pin Reaction Arm Lever	MXT-01-509	MXT-03-509	MXT-05-509
46L	MXT Serial Plate Left	MXT-01-46L	MXT-03-46L	MXT-05-46L
46R	MXT Serial Plate Right	MXT-01-46R	MXT-03-46R	MXT-05-46R
48	Access Plug	MXT-01-02	MXT-03-02	MXT-05-02
58	Screw, Shroud Spring	XLT-01-58	XLT-03-58	XLT-05-58
59	Shroud Spring	XLT-01-59	XLT-03-59	XLT-05-59
61	Piston Rod Assembly	XLT-01-61	XLT-03-61	XLT-05-61
62	Seal Kit	MXT-01-62	MXT-03-62	MXT-05-62
63	Drive Pawl Assembly Kit	XLT-01-63	XLT-03-63	XLT-05-63
00	Uniswivel Assembly	MXT-001	MXT-003	MXT-005
00	Uniswivel Seal Kit	MXT-001-00	MXT-003-00	MXT-005-00

DWG #	DESCRIPTION	HY-10MXT	HY-20MXT	HY-35MXT
1	Housing Assembly	MXT-10-01	MXT-20-01	MXT-35-01
3	Reaction Arm Assembly	MXT-10-03	MXT-20-03	MXT-35-03
4	Drive Plate Universal	XLT-10-04	XLT-20-04	MXT-35-04
5	Square Drive Spline	XLT-10-05-1	XLT-20-05	MXT-35-05
6	Ratchet Spline	XLT-10-06-1	XLT-20-06	MXT-35-06
7	Drive Bushing	XLT-10-07-1	XLT-20-07	MXT-35-07
8	Drive Sleeve Spline	XLT-10-08-1	XLT-20-08	MXT-35-08
10	Reaction Pawl	XLT-10-10	XLT-20-10	MXT-35-10
11	Drive Retainer Assembly	XLT-10-11	XLT-20-11	MXT-35-11
13	Drive Plate Roll Pin	XLT-10-13	XLT-20-13	MXT-35-13
15	Left & Right Button Assembly	MXT-10-15	MXT-20-15	MXT-35-15
15L	Button Lever Assembly	MXT-10-15L	MXT-20-15L	MXT-35-15L
15R	Button Lever Assembly	MXT-10-15R	MXT-20-15R	MXT-35-15R
18	Reaction Pawl Spring	MXT-10-18	MXT-20-18	MXT-35-18
19	Rod End Pin	XLT-10-19	XLT-20-19	MXT-35-19
26	End Cap	MXT-10-26	MXT-20-26	MXT-35-26
27	Drive Pawl Spring	XLT-10-27	XLT-20-27	MXT-35-27
28	Reaction Arm Lever	MXT-10-28	MXT-20-28	MXT-35-28
30	Drive Sleeve Retainer Ring	XLT-10-30	XLT-20-30	MXT-35-30
31	Shroud	MXT-10-31	MXT-20-31	MXT-35-31
32	Shroud Screw	XLT-10-32	XLT-20-32	MXT-35-32
33	Drive Pawl Spring Secondary	XLT-10-33	XLT-20-33	MXT-35-33
34	Reaction Arm Thrust Plate	MXT-10-367	MXT-20-367	MXT-35-367
37	Thrust Plate Screws	MXT-10-503	MXT-20-503	MXT-35-503
38	Reaction Arm Lever Spring	MXT-10-508	MXT-20-508	MXT-35-508
40	Roll Pin Drive Pawl Primary	XLT-10-40	XLT-20-40	MXT-35-40
41	Roll Pin Drive Pawl Secondary	XLT-10-41	XLT-20-41	MXT-35-41
42	Roll Pin Reaction Pawl	XLT-10-42	XLT-20-42	MXT-35-42
43	Reaction Arm Boot	XLT-10-43	XLT-20-43	MXT-35-43
44	Boot Screws	XLT-10-44	XLT-20-44	MXT-35-44
45	Pin Reaction Arm Lever	MXT-10-509	MXT-20-509	MXT-35-509
46L	MXT Serial Plate Left	MXT-10-46L	MXT-20-46L	MXT-35-46L
46R	MXT Serial Plate Right	MXT-10-46R	MXT-20-46R	MXT-35-46R
48	Access Plug	MXT-10-02	MXT-20-02	MXT-35-02
58	Screw, Shroud Spring	XLT-10-58	XLT-20-58	MXT-35-58
59	Shroud Spring	XLT-10-59	XLT-20-59	MXT-35-59
61	Piston Rod Assembly	XLT-10-61	XLT-20-61	MXT-35-61
63	Drive Pawl Assembly Kit	XLT-10-63	XLT-20-63	MXT-35-63
00	Uniswivel Assembly	MXT-0010	MXT-0020	MXT-0035
00	Uniswivel Seal Kit	MXT-0010-00	MXT-0020-00	MXT-0035-00